

DESIGNA

TRAY INSTALLATION INSTRUCTIONS



Customer Guarantee

Showerlux UK Ltd, guarantees all products against faulty materials or manufacture for a period of 2 years from date of installation provided they have been installed, used and maintained in accordance with the manufacturers instructions.

If in our opinion the product fails under those conditions, Showerlux UK Ltd will undertake to repair or replace the product at our option. Should a claim arise, we request that the following conditions be satisfied,

1. Proof of purchase at the time of claim.
2. The product has been fitted / installed in accordance with our fixing instructions, local by laws and general good plumbing practice.
3. The product has been maintained and cared for in accordance with our instructions. If in our opinion the product has been modified, misused, neglected, wilfully or accidentally damaged, we can accept no responsibility for failure.
4. Showerlux UK Ltd, must be given the opportunity to inspect the product in the installed condition.

Should Showerlux UK Ltd carry out work as a result of a claim but subsequently it is revealed that the product has been abused or improperly installed, we reserve the right to charge the customer for all expenses incurred.

The liability of Showerlux UK Ltd is limited to the product supplied by Showerlux UK Ltd, and does not extend to consequential loss or damage arising from the defective product.

All aftersales enquiries must be directed to the DESIGNA stockist where the product was purchased.

Showerlux UK Ltd believes in continuous improvement, if in our opinion the product has failed under the terms of the guarantee and a replacement is offered but identical goods are no longer available Showerlux UK Ltd will replace it with our nearest equivalent product.

This guarantee states our entire liability and is offered to customers acquiring our products as consumers, not in the course of trade or business.

This guarantee does not affect your statutory rights.

This guarantee is only applicable in the UK and Republic of Ireland.



DESIGNA
by 

Checklist

1. Check enclosure dimensions are compatible with the shower tray
2. Check for any transit damage or product defects

Please Note: the above procedures should be carried out prior to installation
Fitting the product is acceptance of quality
All guarantees are void unless these instructions are followed

Steam Units

Please Note: when installing this product in conjunction with a steam unit ensure that the steam outlet is at a minimum height of 300mm from the top of the tray.

Sunken floor installation

1. Cut flooring, allowing clearance on width and length of tray to enable tray to slot into the gap.
2. Add additional joist material to give full support around the edges of the cut floor and the outer edges of the shower tray. Insert further joist material at 90 degrees and to the same height of the existing joists to create a grid pattern of support. Prepare and fit a piece of 10mm marine ply to the fully supported area, ensuring that a suitably sized access hole or cut out has been cut in the marine ply to accommodate the waste. Ensure that the area is level and clear of any debris and that the base is now completely stable. With the above complete proceed to step four of the "Standard Instruction"
3. Install as per floorboard/chipboard instruction.

Maintenance


As good as new finish can be maintained by following these guidelines:

1. Dry out the tray fully after every use to avoid the build up of limescale and soap residue.
2. Clean the shower tray regularly with a damp cloth or sponge followed by a soft dry cloth.
3. Occasionally use a non-abrasive cleaner to remove any stubborn stains.

Standard Instructions

1.


Remove protective coating only from the immediate area's surrounding the waste and those sides of the tray which will be against a wall, then fit the DESIGNA waste provided.

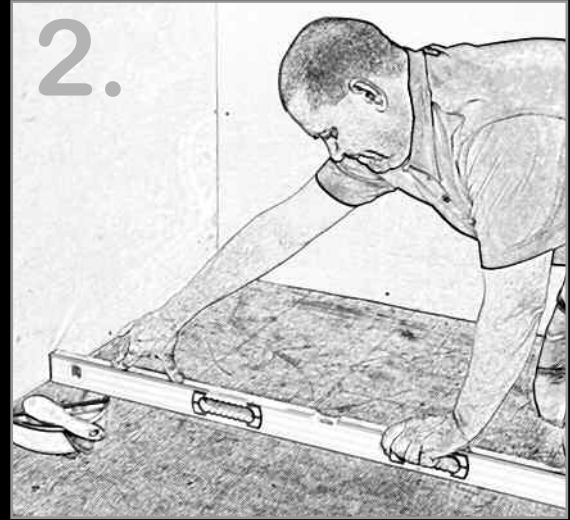


Ensure that the location of the shower tray is level and free of all debris before commencing installation




Prepare a rigid base of 10mm marine plywood, incorporating a suitable recess or cut out for the waste and fix to floor ensuring that the finished base is level and free of debris.

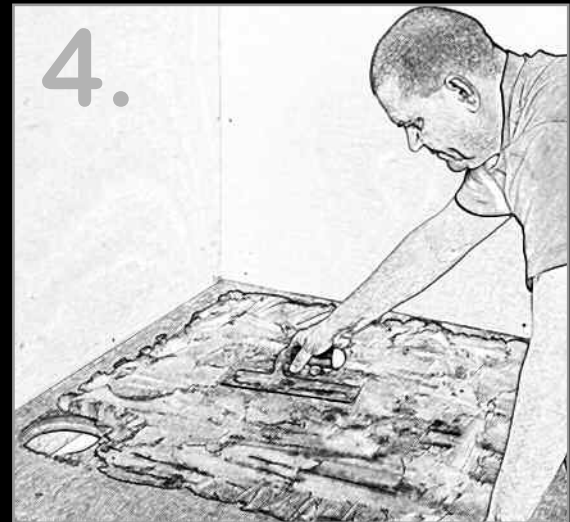


Cover the marine ply base with a 15mm depth of weak cement mix (sand / cement ratio 5:1).

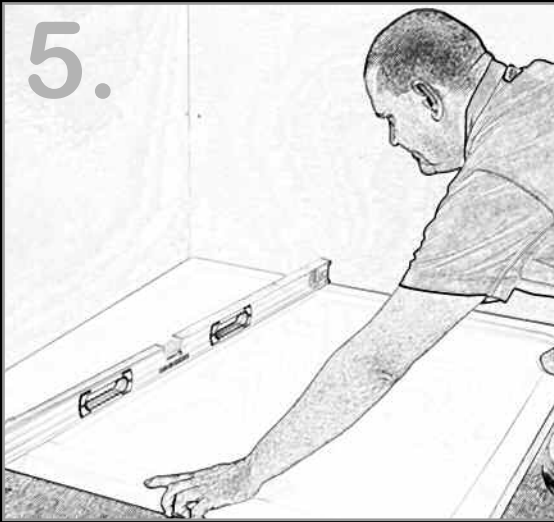

5. Place the shower tray with the fitted waste onto the cement bed and apply gentle pressure with the base of the hand to force the tray into position then finally level the tray and allow to set.

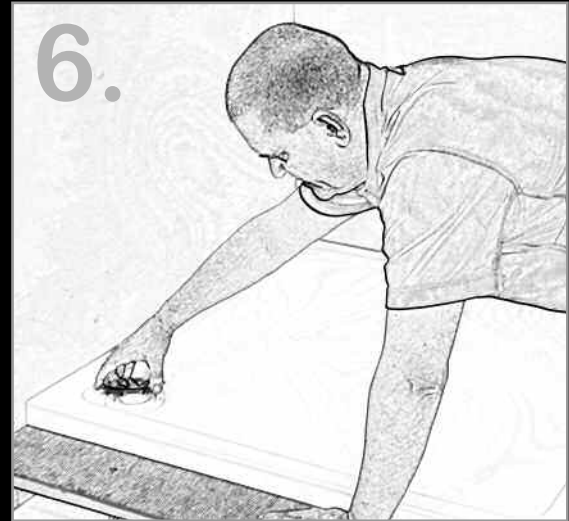

6. When shower tray is set remove the remainder of the protective film, connect the waste pipe and check for leakage.

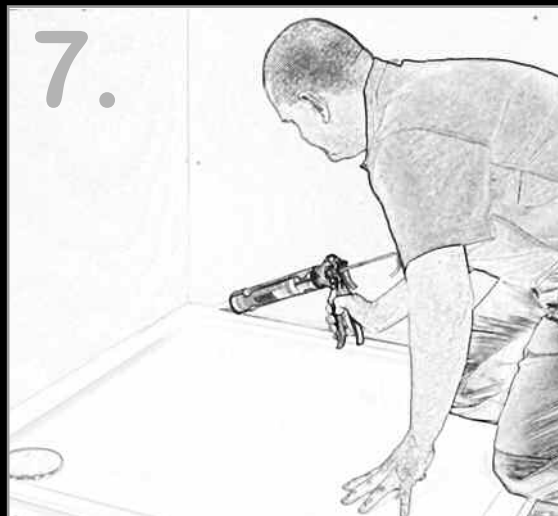

7. Seal joints between tray and wall with an anti fungicidal silicone sealant (which should be used according to manufacturers instructions) and allow to set, cover the tray with a soft dust sheet.



8. Tile and seal joints with an anti fungicidal silicone sealant (which should be used according to manufacturers instructions). Seal between tray and tiles and allow to set.

Head Office

Showerlux UK Limited
Sibree Road
Coventry
West Midlands
CV3 4FD

Telephone: (024) 76639400

Sales Enquiries

Telephone: (024) 76882515
Facsimile: (024) 76305457
Email: sales@showerlux.co.uk

Technical/Spares Enquiries

Telephone: (024) 76882518
Facsimile: (024) 76882539
Email: technical@showerlux.co.uk
spares@showerlux.co.uk

www.showerlux.com

Part of the international  organisation

Northern Ireland Distributor

A.G.M. Distributors Limited
40 Ravenhill Road
Belfast
BT6 8EB

Telephone: (028) 90452613
Facsimile: (028) 90450023
Email: sales@agmbuckley.co.uk

Ireland

Showerlux (Ireland) Limited
Castle Road 10
Little Island
County Cork
Ireland

Telephone: +353 (0) 21 4 520333/520335
Facsimile: +353 (0) 21 4 353752
Email: sales@showerlux.ie

